

## SMS Commends

- User can set different kinds of function commands via sending message, including check position, cut engine, etc.
- All commands will get auto replies according to the message sent.

### **Note device with initial password 123456**

NO	Features	Commands	Reply from device	Remarks
1	Status	#check#password#	IMEI:866968033000000 Number:03001234567, KC:1 IP:track.aotsolutions.com 6994 GPS:1 APN: CMENT TIMEZONE:E-0-0 ACC:ON	Example: <b>#check#123456#</b> IMEI: device IMEI number Number: admin number KC: Alarm reply mode IP: IP or Domain and port APN: apn name TIMEZONE:E-5-00 (Pakistan) ACC: Ignition status ON/OFF
2	Authorize Numbers	#admin#password#number#	Admin ok	Example: <b>#admin#123456#+923001234567#</b> Add authorize number
		#noadmin#password#number#	Noadmin ok	Example: <b>#admin#123456#+923001234567#</b> Delete authorize number
3	Password Change	#password#old password#new passwod#	Password ok	Example: <b>#password#123456#660008#</b> Here is 660008 set as new password
4	Time Zone	#timezone#password#direction# time zone (hours)#time zone (minutes)#	time zone OK	Example: <b>#timezone#123456#E#5#00#</b> (This is Pakistan time zone)
5	Kill Engine	#stopoil#password#	Stop oil ok	Example: <b>#stopoil#123456#</b> For engine Kill
6	Release Engine	#supplyoil#password#	Supply oil ok	Example: <b>#supplyoil#123456#</b> For engine release
7	Vibration alarm	#vibrate#password#1#	vibration ok	Example: <b>#vibrate#123456#1#</b> 1= slight vibration level 2= medium vibration level 3= High vibration level
8	SMS Alert Mode	#KC#password#0#	KC mode ok	Example: <b>#kc#123456#0#</b> 0= Disable SMS alarm 1= Alarm reply on SMS only 2= Alarm reply on Call 3= Alarm reply on SMS and Call both

9	Over Speed	#speed#password#speed#	Speed ok	Example: <b>#speed#123456#060#</b> (Limit set on 3 digits like 060) 60 mean that speed alarm generate with google link on 60km	
10	Sleep Mode	#sleep#password#	Sleep ok	Example: <b>#sleep#123456#</b> This mean device enter sleep mode after 5 minutes when ACC= OFF and device will exit sleep mode when ACC=ON, movement or Vibration.	
		#nosleep#password#	No sleep ok	Example: <b>#nosleep#123456#</b> Disable sleep mode	
11	Setting time Tracking on movement	#at#123456#time in seconds#	At ok	Example: <b>#at#123456#10#</b> Here the movement time is 10s (10 to 600s)	
12	Google link	#smslink#password#	Reply: Google Link, Latitude, Longitude, Date/Time and Speed	Example: <b>#smslink#123456#</b> Get the current Location (IMEI, longitude, latitude, Date time and speed of the vehicle with Google link) <b>Also Call on device number for Google link</b>	
13	Fence Setting	#stockade#password#meter#	Stockade ok	Example: <b>#stockade#123456#500#</b> It means 500 meter radius from current location. <b>Note:</b> Only for fence out, Command automatically disable after cross the Fence.	
14	Ignition Alarm or ACC alarm	#ACC#Password#parameter#	ACC ON ok	<b>Note:</b> This command has impact on both Server Ignition alarm and direct SMS Alert.	
				#ACC#123456#0#	Disable
				#ACC#123456#1#	ON
				#ACC#123456#2#	OFF
				#ACC#123456#3#	ON / OFF
				Device send Google link when ACC ON/OFF	
15	Set APN	#apn#password#APN Name#user#password#	Apn ok	Example: <b>#apn#12345#telenor#internet#internet#</b>	
16	Set IP	#ip#password#IP#Port#	Ip ok	Example: <b>#ip#123456#111.222.333.444#1234#</b> Setting server IP and port.	
17	Re-start device	#reboot#password#	Reboot ok	Example: <b>#reboot#123456#</b> The device will restart after 5-30 sec	
18	Factory Default	#super#	Factory reset	Example <b>#super#</b> Restoring all to factory default	
19	Version Update	#version#password#	Version Detail	Example: <b>#version#123456#</b> Device reply Version detail of Hardware and Firmware	

## **Recommended Settings for Using with Server Platform**

APN	#apn#123456#APN#user#password#	#apn#123456#connect.mobilinkworld.com### #apn#123456#zonginternet### #apn#123456#telenor#internet#internet# #apn#123456#ufone###
IP	#ip#123456#ip#port#	#ip#123456#111.222.333.444#1234#
Movement Time	#at#123456#60#	Here is set movement time 60 seconds
Time Zone	#timezone#123456#E#5#00#	This is Pakistan time
Sleep Mode	#sleep#123456#	Sleep mode enable
ACC Alerts	#ACC#123456#3#	ACC set alarm as ON and OFF
Release Engine	#supplyoil#123456#	Engine Released
SMS Alerts	#kc#123456#0#	SMS Alerts from device disable
Reboot	#reboot#123456#	After setting reboot device for firmware update
Version	#version#123456#	After 5 minutes of reboot latest firmware updated